

**Panther Hand-Held Barcode Scanner Programming – Rev. 9/21/2015**

*For scanner models F430-B and F560-BSU only*

**Panther Software Version 5.2 and higher**

*In order to use the hand-held barcode scanner with the Panther software, the scanner needs to be programmed for various options. Please scan all the barcodes in this document to program the scanner.*

Scan vertically, top to bottom, from the leftmost column to the rightmost column.

**A. Program default factory settings**



Program



Factory Default



End

**B. Program Host Interface**



Program



USB HID Standard Mode



End

**C. Program Code 128/EAN-128 Min. Length**



Program



Code 128/EAN-128 Min. Length



0



1



Finish

*For scanner model F430-B and F560-BSU only*

*Scan vertically, top to bottom, from the leftmost column to the rightmost column.*

**D. Program Code 25 Min. Length**



Program



Code 25 Family Min. Length



0



1



End

**E. Program UPC-A and UPC-E Standardization**



Program



UPC Family Setting



3



End

*For scanner model F430-B and F560-BSU only*

*Scan vertically, top to bottom, from the leftmost column to the rightmost column.*

**F. Program the preamble characters**



*For scanner model F430-B and F560-BSU only*

**G. Program the Symbology ID Transmission Option**



Program



Symbology ID Transmission



1



Finish

*For scanner model F430-B and F560-BSU only*

*Scan vertically, top to bottom, from the leftmost column to the rightmost column.*

**H. Program the Data Formatter Setting – First Insertion**



*For scanner model F430-B and F560-BSU only*

*Scan vertically, top to bottom, from the leftmost column to the rightmost column.*

**J. Program the Data Formatter Setting – Second Insertion**



END OF DOCUMENT