

PANTHER HAND-HELD BARCODE SCANNER PROGRAMMING

(For scanner model F460-B only – Rev. 7/10/2013)

Scan vertically from the leftmost column to the rightmost column.

A. Program default factory settings



PROGRAM
(Enter Programming Mode)

 


Factory Default



END
(Exit Programming Mode)

B. Program Host Interface



PROGRAM
(Enter Programming Mode)



◆USB HID Standard Mode



END
(Exit Programming Mode)

C. Program Code 128/EAN-128 Min. Length



PROGRAM
(Enter Programming Mode)

Code 128/EAN-128 Min. Length



0



1



FIN (Finish)

(For scanner model F460-B only – Rev. 7/10/2013)

D. Program Code 25 Min. Length



PROGRAM
(Enter Programming Mode)

Code 25 Family Min. Length



0



1



FIN (Finish)

 
(For scanner model F460-B only – Rev. 7/10/2013)

E. Program UPC-A and UPC-E Standardization



PROGRAM
(Enter Programming Mode)

UPC Family Setting



7



END
(Exit Programming Mode)

(For scanner model F460-B only – Rev. 7/10/2013)

F. Program the preamble characters (for keyboard interface control) – Scan vertically from the leftmost column to the rightmost column.

